# Sweepmaster B650







## Lever for folding apron

Side broom lever

Key Switch Park Brake

Hopper locking lever

Charge control indicator

Handle Bar

#### **Before Operation**

- · Disconnect mains plug of the charger from power outlet and insert into shaker cavity 13
- Check the charge status indicator of the batteries 2
- Check that the hoppers are clean 10
- · Adjust handle to operator height. Adjust via wing nuts 15 on either side of handle
- Check that panel filter is clean 11
- Make sure park brake is applied 4

## **Operating**

- 1. Turn the machine on using the key switch 3.
- 2. Open the bypass flap (in the case of wet refuse) 12
- 3. Release the parking brake 4
- 4. Lower/lift the side brush using the lever 7
- 6. Lift the drive bar 5 to move forward.
- 7. Use the shaking system 13 to clean the filter regularly.
- 8. If picking up larger debris, open the intake chute via the folding apron lever 6.
- 9. Check the dirt hoppers 10. If necessary, empty the dirt hoppers.

## **After Operation (Maintenance and Service)**

- Turn power off and apply the parking brake 4
- Actuate the shaking device 13 (pull lever out and push back in again - repeat several times)
- Empty hoppers 10. To remove dirt hoppers, move the hopper locking lever 8 to the right and pivot the handlebar 9 forward.
- Check the cylinder main broom for wear and foreign particles. Remove hoppers to access broom.
- Clean the machine as necessary
- Charge battery take plug from inside shaker cavity 13 and connect with power outlet. Charge for a minimum of 8 hours.

#### **Troubleshooting**

Unsatisfactory sweeping result:

- The dirt hoppers 10 are full.
- Agitate the filter 13. Clean or replace the filter, see operating manual.
- · The side brush 14 or cylinder broom is worn. If necessary, readjust or replace it, see operating manual.

Qualified persons only are authorised to operate the machine!

Keep clear of hazard zone of the machine!

Please pay attention to the informations in the instruction manual!